Specifications



Variable speed drive, Altivar 61, 37kW, 50hp, 380 to 480V, IP20

ATV61HD37N4Z

- Discontinued on: Jan 1, 2017
- (!) End-of-service on: Jan 1, 2025

| Ma | in | |
|----|----|--|

| Range of Product | Altivar 61 |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Product or Component Type | Variable speed drive |
| Product Specific Application | Pumping and ventilation machine |
| Component name | ATV61 |
| Motor power kW | 37 kW, 3 phase 380480 V |
| Maximum Horse Power Rating | 50 hp, 3 phase 380480 V |
| power supply voltage | 380480 V - 1510 % |
| supply number of phases | 3 phase |
| Line current | 69 A 480 V 3 phase 37 kW / 50 hp 84 A 380 V 3 phase 37 kW / 50 hp |
| EMC filter | Level 3 EMC filter |
| Variant | Without remote graphic terminal |
| Assembly style | With heat sink |
| Apparent power | 55.3 kVA 380 V 3 phase 37 kW / 50 hp |
| maximum prospective line lsc | 22 kA 3 phase |
| Maximum transient current | 94.8 A 60 s, 3 phase |
| Nominal switching frequency | 12 kHz |
| Switching frequency | 116 kHz adjustable 1216 kHz with derating factor |
| asynchronous motor control | Flux vector control without sensor, standard Voltage/frequency ratio, 5 points Voltage/frequency ratio - Energy Saving, quadratic U/f Voltage/frequency ratio, 2 points |
| Synchronous motor control profile | Vector control without sensor, standard |
| Communication Port Protocol | Modbus CANopen |
| Type of polarization | No impedance Modbus |
| | |

Price is "List Price" and may be subject to a trade discount - check with your local distributor or retailer for actual price.

Option card

Communication card APOGEE FLN Communication card BACnet Communication card CC-Link Controller inside programmable card Communication card DeviceNet Communication card EtherNet/IP Communication card Fipio I/O extension card Communication card Interbus-S Communication card LonWorks Communication card METASYS N2 Communication card Modbus Plus Communication card Modbus TCP Communication card Modbus/Uni-Telway Multi-pump card Communication card Profibus DP Communication card Profibus DP V1

Complementary

| Product destination | Synchronous motors Asynchronous motors |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| power supply voltage limits | 323528 V |
| power supply frequency | 5060 Hz - 55 % |
| power supply frequency limits | 47.563 Hz |
| Continuous output current | 65 A 12 kHz, 460 V - 3 phase 79 A 12 kHz, 380 V - 3 phase |
| Output frequency | 0.1599 Hz |
| Speed range | 1100 in open-loop mode, without speed feedback |
| Speed accuracy | +/- 10 % of nominal slip 0.2 Tn to Tn without speed feedback |
| Torque accuracy | +/- 15 % in open-loop mode, without speed feedback |
| Transient overtorque | 130 % of nominal motor torque +/- 10 % 60 s |
| Braking torque | <= 125 % with braking resistor 30 % without braking resistor |
| Regulation loop | Frequency PI regulator |
| Motor slip compensation | Can be suppressed Not available in voltage/frequency ratio (2 or 5 points) Automatic whatever the load Adjustable |
| diagnostic | for drive voltage 1 LED (red) |
| Output voltage | <= power supply voltage |
| electrical isolation | Between power and control terminals |
| type of cable for mounting in an enclosure | With an IP21 or an IP31 kit 3 IEC cable 104 °F (40 °C), copper 70 °C / PVC With UL Type 1 kit 3 UL 508 cable 104 °F (40 °C), copper 75 °C / PVC Without mounting kit 1 IEC cable 113 °F (45 °C), copper 70 °C / PVC Without mounting kit 1 IEC cable 113 °F (45 °C), copper 90 °C / XLPE/EPR |
| Electrical connection | Terminal 2.5 mm² / AWG 14 Al1-/Al1+, Al2, AO1, R1A, R1B, R1C, R2A, R2B, Ll1Ll6, PWR) Terminal 50 mm² / AWG 1/0 L1/R, L2/S, L3/T, U/T1, V/T2, W/T3, PC/-, PO, PA/+, PA, PB) |
| Tightening torque | 5.3 lbf.in (0.6 N.m) Al1-/Al1+, Al2, AO1, R1A, R1B, R1C, R2A, R2B, Ll1Ll6, PWR) 106.2 lbf.in (12 N.m), 106.2 lb.in L1/R, L2/S, L3/T, U/T1, V/T2, W/T3, PC/-, PO, PA/+, PA, PB) |
| Supply | Internal supply for reference potentiometer (1 to 10 kOhm) 10.5 V DC, +/- 5 %, <10 mA overload and short-circuit protection Internal supply 24 V DC 2127 V), <200 mA overload and short-circuit protection External supply 24 V DC 1930 V) |
| Analogue input number | 2 |
| | |

| Analogue input type | Al1-/Al1+ bipolar differential voltage +/- 10 V DC 24 V max 11 bits + sign Al2 software-configurable current 020 mA 242 Ohm 11 bits Al2 software-configurable voltage 010 V DC 24 V max 30000 Ohm 11 bits |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | |
| sampling time | 2 ms +/- 0.5 ms Al1-/Al1+) - analog input |
| | 2 ms +/- 0.5 ms Al2) - analog input 2 ms +/- 0.5 ms AO1) - analog output |
| | 2 ms +/- 0.5 ms L11L15) - discrete input |
| | 2 ms +/- 0.5 ms LI6)if configured as logic input - discrete input |
| absolute accuracy precision | +/- 0.6 % Al1-/Al1+) for a temperature variation 60 °C |
| | +/- 0.6 % Al2) for a temperature variation 60 °C |
| | +/- 1 % AO1) for a temperature variation 60 °C |
| Linearity error | +/- 0.15 % of maximum value Al1-/Al1+) |
| | +/- 0.15 % of maximum value Al2) |
| | +/- 0.2 % AO1) |
| Analogue output number | 1 |
| Analogue output type | AO1 software-configurable current 020 mA 500 Ohm 10 bits |
| | AO1 software-configurable voltage 010 V DC 470 Ohm 10 bits AO1 software-configurable logic output 10 V, 20 mA |
| Discrete output number | 2 |
| Discrete output type | Configurable relay logic R1A, R1B, R1C) NO/NC - 100000 cycles |
| | Configurable relay logic R2A, R2B) NO - 100000 cycles |
| maximum response time | <= 100 ms in STO (Safe Torque Off) |
| | R1A, R1B, R1C <= 7 ms +/- 0.5 ms |
| | R2A, R2B <= 7 ms +/- 0.5 ms |
| Minimum switching current | 3 mA 24 V DC configurable relay logic |
| Maximum switching current | R1, R2 2 A 250 V AC inductive, cos phi = 0.4 7 ms |
| | R1, R2 2 A 30 V DC inductive, cos phi = 0.4 7 ms |
| | R1, R2 5 A 250 V AC resistive, cos phi = 1 0 ms R1, R2 5 A 30 V DC resistive, cos phi = 1 0 ms |
| | |
| Discrete input number | 7 |
| Discrete input type | Programmable L11L15) 24 V DC <= 30 V)level 1 PLC - 3500 Ohm |
| | Switch-configurable LI6) 24 V DC <= 30 V)level 1 PLC - 3500 Ohm Switch-configurable PTC probe LI6)06 - 1500 Ohm |
| | Safety input PWR) 24 V DC <= 30 V) - 1500 Ohm |
| Discrete input logic | Negative logic (sink) LI1LI5), > 16 V, < 10 V |
| | Positive logic (source) LI1LI5), < 5 V, > 11 V |
| | Negative logic (sink) LI6)if configured as logic input, > 16 V, < 10 V |
| | Positive logic (source) LI6)if configured as logic input, < 5 V, > 11 V |
| Acceleration and deceleration | Automatic adaptation of ramp if braking capacity exceeded, by using resistor |
| ramps | Linear adjustable separately from 0.01 to 9000 s |
| | S, U or customized |
| Braking to standstill | By DC injection |
| | A second second in a limit and drive |
| Protection type | Against exceeding limit speed drive |
| Protection type | Against input phase loss drive |
| Protection type | Against input phase loss drive Break on the control circuit drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive Overcurrent between output phases and earth drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive Overcurrent between output phases and earth drive Overcheating protection drive Overvoltages on the DC bus drive Power removal drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive Overcurrent between output phases and earth drive Overheating protection drive Overvoltages on the DC bus drive Power removal drive Short-circuit between motor phases drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive Overcurrent between output phases and earth drive Overchating protection drive Overvoltages on the DC bus drive Power removal drive Short-circuit between motor phases drive Thermal protection drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive Overcurrent between output phases and earth drive Overheating protection drive Overvoltages on the DC bus drive Power removal drive Short-circuit between motor phases drive Thermal protection drive Motor phase break motor |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive Overcurrent between output phases and earth drive Overchating protection drive Overvoltages on the DC bus drive Power removal drive Short-circuit between motor phases drive Thermal protection drive |
| Protection type | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Overcurrent between output phases and earth drive Overheating protection drive Overvoltages on the DC bus drive Power removal drive Short-circuit between motor phases drive Thermal protection drive Motor phase break motor Power removal motor |
| | Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Overcurrent between output phases and earth drive Overheating protection drive Overvoltages on the DC bus drive Power removal drive Short-circuit between motor phases drive Thermal protection drive Motor phase break motor Power removal motor Thermal protection motor |

| 1 RJ45 on front face)Modbus 1 RJ45 on terminal)Modbus Male SUB-D 9 on RJ45CANopen | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2-wire RS 485 Modbus | |
| RTU Modbus | |
| 4800 bps, 9600 bps, 19200 bps, 38.4 Kbps Modbus on terminal 9600 bps, 19200 bps Modbus on front face 20 kbps, 50 kbps, 125 kbps, 250 kbps, 500 kbps, 1 Mbps CANopen | |
| 8 bits, 1 stop, even parity Modbus on front face 8 bits, odd even or no configurable parity Modbus on terminal | |
| 1127 CANopen 1247 Modbus | |
| Slave CANopen | |
| CE | |
| Vertical +/- 10 degree | |
| 81.6 lb(US) (37 kg) | |
| 9.4 in (240 mm) | |
| 21.7 in (550 mm) | |
| 10.5 in (266 mm) | |
| | 1 RJ45 on terminal)Modbus Male SUB-D 9 on RJ45CANopen 2-wire RS 485 Modbus RTU Modbus 4800 bps, 9600 bps, 19200 bps, 38.4 Kbps Modbus on terminal 9600 bps, 19200 bps Modbus on front face 20 kbps, 50 kbps, 125 kbps, 250 kbps, 500 kbps, 1 Mbps CANopen 8 bits, 1 stop, even parity Modbus on front face 8 bits, 1 stop, even parity Modbus on front face 8 bits, 0dd even or no configurable parity Modbus on terminal 1127 CANopen 1247 Modbus Slave CANopen CE Vertical +/- 10 degree 81.6 lb(US) (37 kg) 9.4 in (240 mm) 21.7 in (550 mm) |

Environment

| Noise level | 64 dB 86/188/EEC | | | | |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|
| Dielectric strength | 3535 V DC between earth and power terminals 5092 V DC between control and power terminals Conducted radio-frequency immunity test level 3 conforming to IEC 61000-4-6 Electrical fast transient/burst immunity test level 4 conforming to IEC 61000-4-4 Electrostatic discharge immunity test level 3 conforming to IEC 61000-4-2 Radiated radio-frequency electromagnetic field immunity test level 3 conforming to IEC 61000-4-3 Voltage dips and interruptions immunity test conforming to IEC 61000-4-11 | | | | |
| Electromagnetic compatibility | | | | | |
| Standards | IEC 61800-5-1 IEC 60721-3-3 class 3C1 EN 55011 class A group 2 IEC 61800-3 environments 2 category C3 IEC 61800-3 IEC 61800-3 environments 1 category C3 UL Type 1 IEC 60721-3-3 class 3S2 | | | | |
| Product Certifications | UL CSA DNV GOST C-tick NOM 117 | | | | |
| Pollution degree | 3 IEC 61800-5-1 3 UL 840 | | | | |
| degree of proctection | IP20 on upper part without blanking plate on cover IEC 60529 IP20 on upper part without blanking plate on cover IEC 61800-5-1 IP21 IEC 60529 IP21 IEC 61800-5-1 IP41 on upper part IEC 60529 IP41 on upper part IEC 61800-5-1 IP54 on lower part IEC 61800-5-1 | | | | |
| Vibration resistance | 1 gn (f= 13200 Hz) conforming to IEC 60068-2-6 1.5 mm peak to peak (f= 313 Hz) conforming to IEC 60068-2-6 | | | | |
| Shock resistance | 15 gn 11 ms IEC 60068-2-27 | | | | |
| | | | | | |

| Relative humidity | 595 % without condensation IEC 60068-2-3 595 % without dripping water IEC 60068-2-3 | | | |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------|--|--|--|
| Ambient air temperature for operation | 14122 °F (-1050 °C) (without derating) 122140 °F (5060 °C) (with derating factor) | | | |
| Ambient Air Temperature for Storage | -13158 °F (-2570 °C) | | | |
| Operating altitude | <= 3280.84 ft (1000 m) without derating 3280.849842.52 ft (10003000 m) with current derating 1 % per 100 m | | | |

Ordering and shipping details

| Category | 22137-ATV61 7.5 THRU 50 HP DRIVES | | |
|-------------------|-----------------------------------|--|--|
| Discount Schedule | CP4C | | |
| GTIN | 3389119205306 | | |
| Returnability | No | | |
| Country of origin | IN | | |

Packing Units

| Unit Type of Package 1 | PCE |
|------------------------------|-----------------------|
| Number of Units in Package 1 | 1 |
| Package 1 Height | 18.50 in (47.0 cm) |
| Package 1 Width | 23.62 in (60.0 cm) |
| Package 1 Length | 31.50 in (80.0 cm) |
| Package 1 Weight | 91.5 lb(US) (41.5 kg) |

Contractual warranty


Warranty

18 months

Dimensions Drawings

Variable Speed Drives without Graphic Display Terminal

Dimensions without Option Card

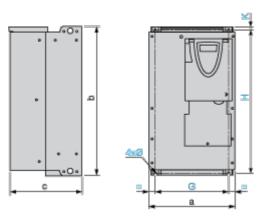


Dimensions in mm

| а | b | с | G | Н | К | Ø |
|-----|-----|-----|-----|-------|----|---|
| 240 | 550 | 230 | 206 | 531.5 | 11 | 6 |

Dimensions in in.

| а | b | с | G | Н | К | Ø |
|------|-------|------|------|-------|------|------|
| 9.44 | 21.65 | 9.05 | 8.11 | 20.93 | 0.45 | 0.23 |

Dimensions with 1 Option Card (1)

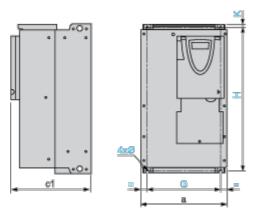

Dimensions in mm


| а | c1 | G | Н | К | Ø |
|-----|-----|-----|-------|----|---|
| 240 | 233 | 206 | 531.5 | 11 | 6 |

Dimensions in in.

| а | c1 | G | Н | К | Ø | |
|------|------|------|-------|------|------|--|
| 9.44 | 9.17 | 8.11 | 20.93 | 0.45 | 0.23 | |

(1) Option cards: I/O extension cards, communication cards or "Controller Inside" programmable card.

Dimensions with 2 Option Cards (1)

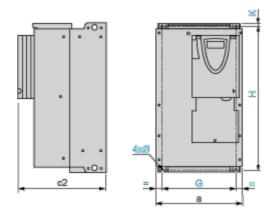

Dimensions in mm

| а | c2 | G | Н | К | Ø |
|-----|-----|-----|-------|----|---|
| 240 | 276 | 206 | 531.5 | 11 | 6 |

Dimensions in in.

| а | c2 | G | Н | К | Ø |
|------|-------|------|-------|------|------|
| 9.44 | 10.87 | 8.11 | 20.93 | 0.45 | 0.23 |

(1) Option cards: I/O extension cards, communication cards or "Controller Inside" programmable card.

ATV61HD37N4Z

Mounting and Clearance


Mounting Recommendations

Depending on the conditions in which the drive is to be used, its installation will require certain precautions and the use of appropriate accessories.


Install the unit vertically:

- Avoid placing it close to heating elements
- Leave sufficient free space to ensure that the air required for cooling purposes can circulate from the bottom to the top of the unit.


Clearance

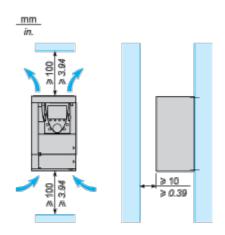

Mounting Types

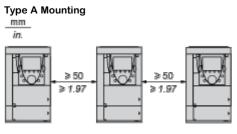


Type B Mounting

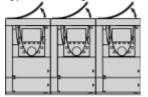

Type C Mounting

mm

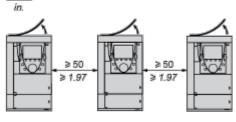

By removing the protective blanking cover from the top of the drive, the degree of protection for the drive becomes IP 20.

The protective blanking cover may vary according to the drive model (refer to the user guide).


ATV61HD37N4Z

Specific Recommendations for Mounting the Drive in an Enclosure

Ventilation

To ensure proper air circulation in the drive:

- Fit ventilation grilles.
- Ensure that there is sufficient ventilation. If there is not, install a forced ventilation unit with a filter. The openings and/or fans must provide a flow rate at least equal to that of the drive fans (refer to the product characteristics).

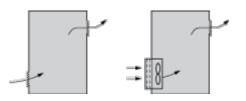

- Use special filters with IP 54 protection.
- Remove the blanking cover from the top of the drive.


Dust and Damp Proof Metal Enclosure (IP 54)

The drive must be mounted in a dust and damp proof enclosure in certain environmental conditions: dust, corrosive gases, high humidity with risk of condensation and dripping water, splashing liquid, etc. This enables the drive to be used in an enclosure where the maximum internal temperature reaches 50°C.

Connections and Schema

Wiring Diagram Conforming to Standards EN 954-1 Category 1, IEC/EN 61508 Capacity SIL1, in Stopping Category 0 According to IEC/EN 60204-1

Three-Phase Power Supply with Upstream Breaking via Contactor

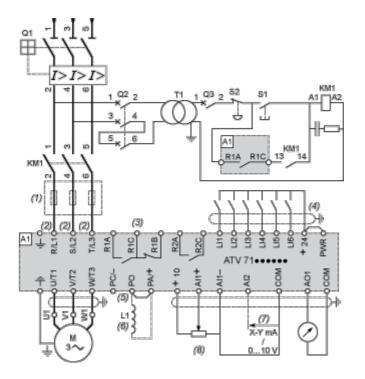

A1 ATV61 drive

KM1 Contactor

L1 DC choke

Q1 Circuit-breaker

Q2 GV2 L rated at twice the nominal primary current of T1

Q3 GB2CB05

S1, S2 XB4 B or XB5 A pushbuttons

T1 100 VA transformer 220 V secondary

(1) Line choke (three-phase); mandatory for ATV61HC11Y...HC80Y drives (except when a special transformer is used (12-pulse)).

(2) For ATV61HC50N4, ATV61HC63N4 and ATV61HC50Y...HC80Y drives, refer to the power terminal connections diagram.

(3) Fault relay contacts. Used for remote signalling of the drive status.

(4) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).

(5) There is no PO terminal on ATV61HC11Y...HC80Y drives.

(6) Optional DC choke for ATV61H•••M3, ATV61HD11M3X...HD45M3X and ATV61H075N4...HD75N4 drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV61HD55M3X...HD90M3X, ATV61HD90N4...HC63N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it. For ATV61W•••N4 and ATV61W•••N4C drives, the DC choke is integrated.

(7) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.


(8) Reference potentiometer.

NOTE: All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

ATV61HD37N4Z

Wiring Diagram Conforming to Standards EN 954-1 Category 1, IEC/EN 61508 Capacity SIL1, in Stopping Category 0 According to IEC/EN 60204-1

Three-Phase Power Supply with Downstream Breaking via Switch Disconnector

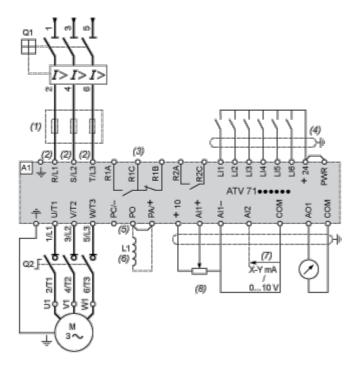

- A1 ATV61 drive
- L1 DC choke
- Q1 Circuit-breaker
- Q2 Switch disconnector (Vario)

(1) Line choke (three-phase), mandatory for ATV61HC11Y...HC80Y drives (except when a special transformer is used (12-pulse)).

(2) For ATV61HC50N4, ATV61HC63N4 and ATV61HC50Y...HC80Y drives, refer to the power terminal connections diagram.

(3) Fault relay contacts. Used for remote signalling of the drive status.

(4) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).

(5) There is no PO terminal on ATV61HC11Y...HC80Y drives.

(6) Optional DC choke for ATV61H•••M3, ATV61HD11M3X...HD45M3X and ATV61H075N4...HD75N4 drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV61HD55M3X...HD90M3X, ATV61HD90N4...HC63N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it. For ATV61W•••N4 and ATV61W•••N4C drives, the DC choke is integrated.

(7) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.


(8) Reference potentiometer.

NOTE: All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

Life Is On Schneider

Wiring Diagram Conforming to Standards EN 954-1 Category 3, IEC/EN 61508 Capacity SIL2, in Stopping Category 0 According to IEC/EN 60204-1

Three-Phase Power Supply, Low Inertia Machine, Vertical Movement

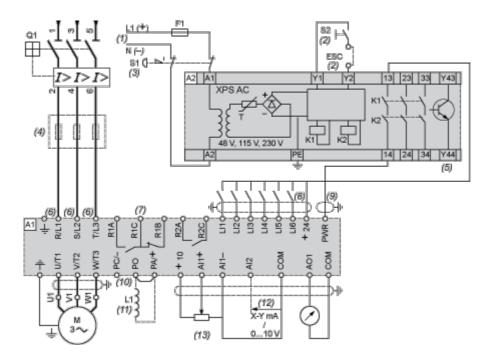

A1 ATV61 drive

A2 Preventa XPS AC safety module for monitoring emergency stops and switches. One safety module can manage the "Power Removal" function for several drives on the same machine. In this case, each drive must connect its PWR terminal to its + 24 V via the safety contacts on the XPS AC module. These contacts are independent for each drive.

F1 Fuse

L1 DC choke

Q1 Circuit-breaker

S1 Emergency stop button with 2 contacts

S2 XB4 B or XB5 A pushbutton

(1) Power supply: 24 Vdc or Vac, 115 Vac, 230 Vac.

(2) S2: resets XPS AC module on power-up or after an emergency stop. ESC can be used to set external starting conditions.

(3) Requests freewheel stopping of the movement and activates the "Power Removal" safety function.

(4) Line choke (three-phase), mandatory for and ATV61HC11Y...HC80Y drives (except when a special transformer is used (12-pulse)).

(5) The logic output can be used to signal that the machine is in a safe stop state.

(6) For ATV61HC50N4, ATV61HC63N4 and ATV61HC50Y...HC80Y drives, refer to the power terminal connections diagram.

(7) Fault relay contacts. Used for remote signalling of the drive status.

(8) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).

(9) Standardized coaxial cable, type RG174/U according to MIL-C17 or KX3B according to NF C 93-550, external diameter 2.54 mm /0.09 in., maximum length 15 m / 49.21 ft. The cable shielding must be earthed.

(10) There is no PO terminal on ATV61HC11Y...HC80Y drives.

(11) Optional DC choke for ATV61H•••M3, ATV61HD11M3X...HD45M3X and ATV61H075N4...HD75N4 drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV61HD55M3X...HD90M3X,

Product data sheet ATV61HD37N4Z

ATV61HD90N4...HC63N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it. For ATV61W•••N4 and ATV61W•••N4C drives, the DC choke is integrated.


- (12) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.
- (13) Reference potentiometer.

NOTE: All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

ATV61HD37N4Z

Wiring Diagram Conforming to Standards EN 954-1 Category 3, IEC/EN 61508 Capacity SIL2, in Stopping Category 1 According to IEC/EN 60204-1

Three-Phase Power Supply, High Inertia Machine

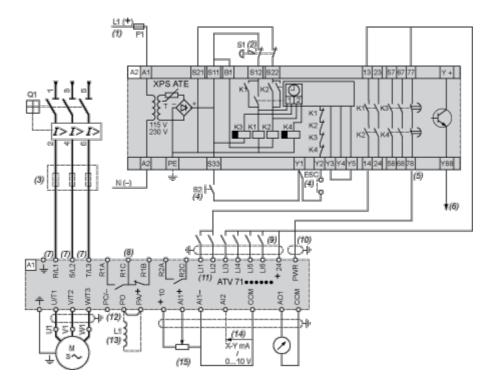

A1 ATV61 drive

A2 (5) Preventa XPS ATE safety module for monitoring emergency stops and switches. One safety module can manage the "Power Removal" safety function for several drives on the same machine. In this case the time delay must be adjusted on the drive controlling the motor that requires the longest stopping time. In addition, each drive must connect its PWR terminal to its + 24 V via the safety contacts on the XPS ATE module. These contacts are independent for each drive.

- F1 Fuse
- L1 DC choke

Q1 Circuit-breaker

- S1 Emergency stop button with 2 contacts
- S2 XB4 B or XB5 A pushbutton
- (1) Power supply: 24 Vdc or Vac, 115 Vac, 230 Vac.

(2) Requests controlled stopping of the movement and activates the "Power Removal" safety function.

(3) Line choke (three-phase), mandatory for ATV61HC11Y...HC80Y drives (except when a special transformer is used (12-pulse)).

(4) S2: resets XPS ATE module on power-up or after an emergency stop. ESC can be used to set external starting conditions.

(5) The logic output can be used to signal that the machine is in a safe state.

(6) For stopping times requiring more than 30 seconds in category 1, use a Preventa XPS AV safety module which can provide a maximum time delay of 300 seconds.

(7) For ATV61HC50N4, ATV61HC63N4 and ATV61HC50Y...HC80Y drives, refer to the power terminal connections diagram.

(8) Fault relay contacts. Used for remote signalling of the drive status.

ATV61HD37N4Z

(9) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).

(10) Standardized coaxial cable, type RG174/U according to MIL-C17 or KX3B according to NF C 93-550, external diameter 2.54 mm/0.09 in., maximum length 15 m/49.21 ft. The cable shielding must be earthed.

(11) Logic inputs LI1 and LI2 must be assigned to the direction of rotation: LI1 in the forward direction and LI2 in the reverse direction.

(12) There is no PO terminal on ATV61HC11Y...HC80Y drives.

(13) Optional DC choke for ATV61H•••M3, ATV61HD11M3X...HD45M3X and ATV61H075N4...HD75N4 drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV61HD55M3X...HD90M3X, ATV61HD90N4...HC63N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it. For ATV61W•••N4 and ATV61W•••N4C drives, the DC choke is integrated.


- (14) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.
- (15) Reference potentiometer.

NOTE: All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

Performance Curves

Derating Curves

The derating curves for the drive nominal current (In) depend on the temperature, the switching frequency and the mounting type (A, B or C). For intermediate temperatures (e.g. 55°C), interpolate between 2 curves.

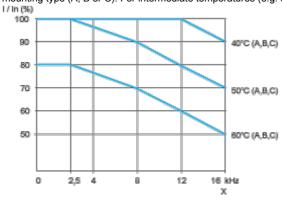

X Switching frequency

NOTE: Above 50°C, the drive should be fitted with a control card fan kit.